

EN

User manual

2

Washer/Dryer Stand with Drawer

USER MANUAL

PDST HEC

ZANUSSI
Get Living!

Contents

How to install the stand on your washing machine _____ 2

How to install the stand on your tumble dryer _____ 4

Subject to change without notice

How to install the stand on your washing machine

Warning! Do not install the stand on a washer/dryer column.

Caution! If the washing machine is already connected to the mains, proceed as follows:

1. pull out the plug from the mains;
2. stop water supply by closing the tap;
3. disconnect the inlet pipe and the drain pipe and get ready to collect any water left in the machine with a shallow basin.

Important! With a brand new washing machine, do as follows:

1. install the stand before connecting the machine to water and electricity mains;
2. follow the instructions to remove any transport safety equipment.

Before you start installing the stand on your washing machine make sure you have plenty of room. Avoid working in restricted spaces as the installation and subsequent adjustment operations may turn out quite awkward and difficult to carry out.

Take the stand out of its package and use the cardboard to rest washing machine and stand on, so you won't scratch the equipment varnish and the floor.

In the stand's drawer you will find an envelope with all the necessary material for a correct assembly.

Have ready a Phillips screwdriver to fit rear brackets to the stand and to fit rear brackets to the machine.

The pack includes:

- 4 front rubber feet (for tumble dryer only);
- 6 rear metal brackets (4 for washing machine and, depending on the model, 2 for tumble dryer);
- 6 self-tapping screws (4.2 x 13 mm);
- 1 key to adjust stand feet.

Important! Before starting the installation, adjust the stand's feet in order to achieve a perfectly stable horizontal position.

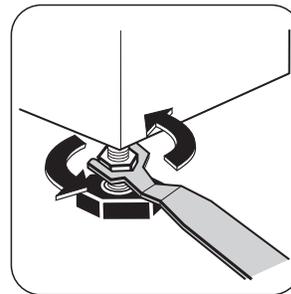


fig. 1

Proceed as follows (fig. 1):

- loosen the nuts using the key supplied with the stand;
- adjust the feet to allow for an uneven floor;
- tighten up all check nuts.

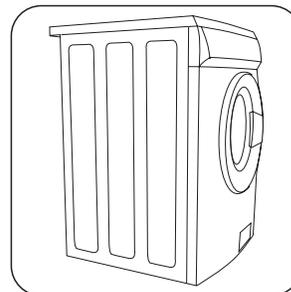


fig. 2

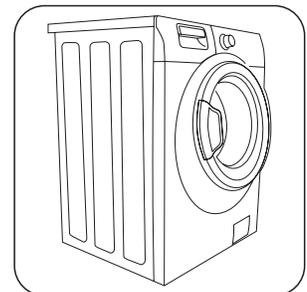


fig. 3

Before picking the rear brackets you must first look at the machine's side (fig. 2 and 3).

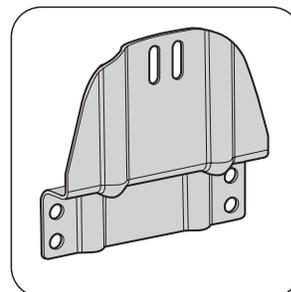


fig. 4

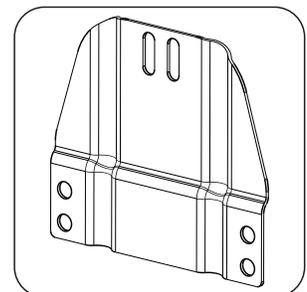


fig. 5

If the side is as shown in fig. 2, you must pick the rear brackets as in fig. 4.

If, the side is as shown in fig. 3, you must pick the rear brackets as in fig. 5.

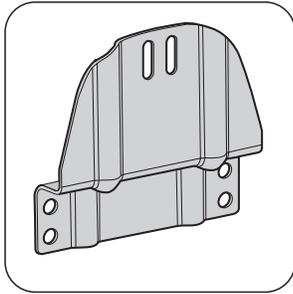


fig. 6

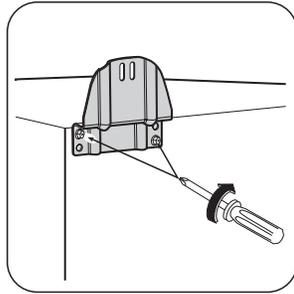


fig. 7

Now you can proceed to fit one of the rear brackets to the left side of the stands back using the screws supplied (fig. 6 and 7).

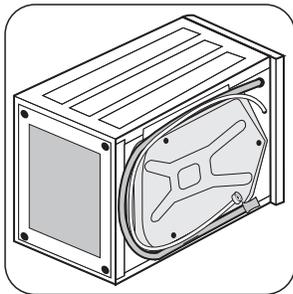


fig. 8

Lay gently the washing machine on the detergent compartment side (fig. 8).

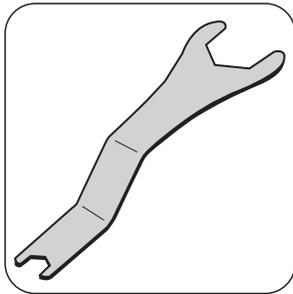


fig. 9

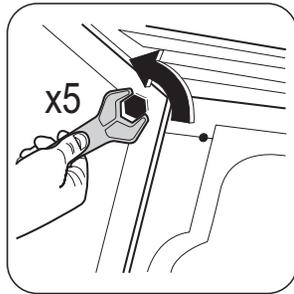


fig. 10

Loosen the washing machines adjusting feet using the key supplied with your washing machine, then undo 5 complete turns (fig. 9 and 10).

Important! If the feet are already partly undone, you must first screw them on again and then undo 5 complete turns.

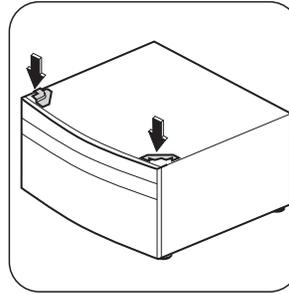


fig. 11

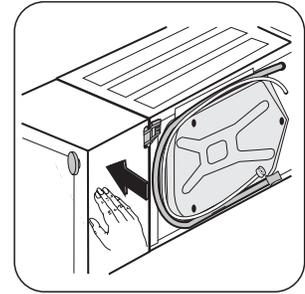


fig. 12

Slide the stand under the washing machine so that its front adjusting feet match the stands front brackets (fig. 11) and the rear bracket is positioned against the machines back (fig. 12).

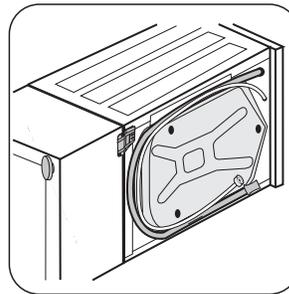


fig. 13

Screw the rear bracket onto the machines back using one of the supplied screws (fig. 13).

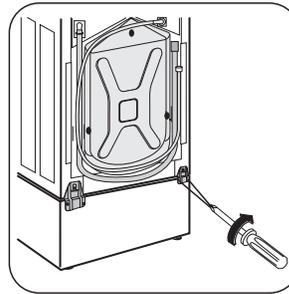


fig. 14

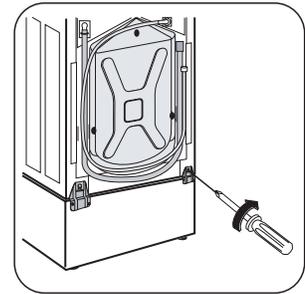


fig. 15

Return machine and stand to a vertical position, and screw the other bracket onto the stand and the machines back using the remaining supplied screws (fig. 14 and 15).

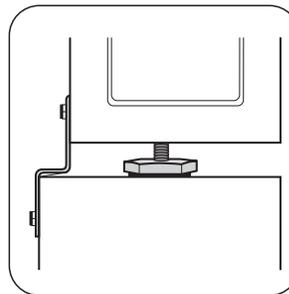


fig. 16

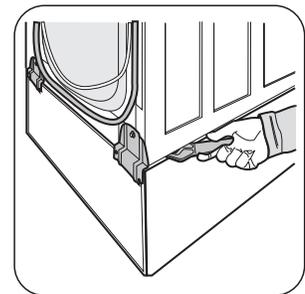


fig. 17

The stand is now installed; check whether your washing machines back feet rest on it (fig. 16). Otherwise undo them using the key supplied with your washing machine (fig. 17).

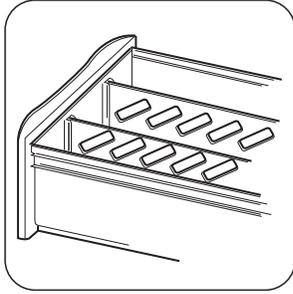


fig. 18



fig. 19

The stand's drawer, with a capacity of up to 20 kg, contains two dividers; they may be taken out if you wish (fig. 18). The drawer was designed with a special compartment inside where you can place a folding plastic box, supplied, quite useful to store your washing laundry (fig. 19).

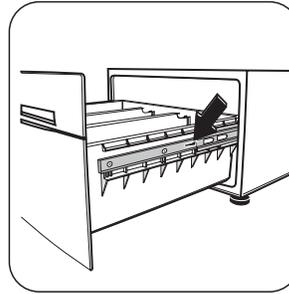


fig. 20

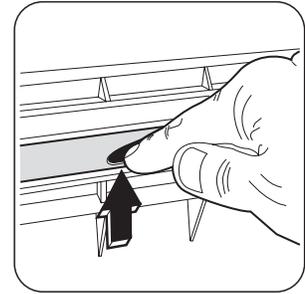


fig. 21

The drawer slides on two metal runners and can easily be pulled out to the full. Should you wish to remove the drawer, you must pull it out completely (fig. 20) and act on the two black plastic levers halfway through the metal runners. Pull the right lever down and the left lever up: the drawer will be uncoupled from the runners and easily removed (fig. 21).

Warning! Do not place any solvent or flammable substance into the drawer, as the fumes could be a possible cause of fire.

How to install the stand on your tumble dryer

Warning! Do not install the stand on a washer/dryer column.

Caution! If the tumble dryer is already connected to the mains, proceed as follows:

1. Pull out the plug from the mains;
2. remove the condensation tank found in the upper or alternatively lower part of the tumble dryer (according to machine type) and empty it, if necessary;
3. Drain off any condensation water through the hose found on the lower part of the machines back (fig. 1). Place a mop on the floor and remove first the clamp (A) using a pair of pliers, then the cap (B). Tilt the machine slightly on one side. When all the water has drained off, put the cap back onto the hose and re-fasten the clamp.

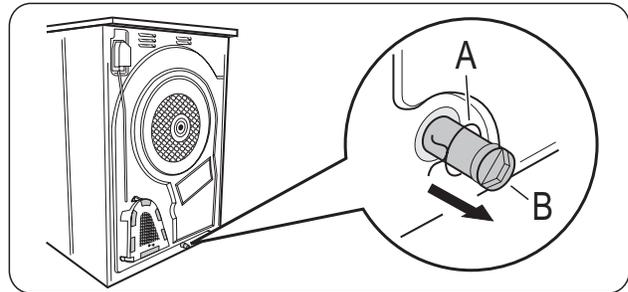


fig. 1

Important! With a brand new tumble dryer, do as follows:

1. install the stand before connecting the machine to the mains;
2. follow the instructions to remove any transport safety equipment.


Before you start fitting the stand to the machine make sure you have plenty of room. Avoid working in restricted spaces as the installation and subsequent adjustment operations may turn out quite awkward and difficult to carry out.

Take the stand out of its package and use the cardboard to rest machine and stand on, so you won't scratch the equipment varnish and the floor.



In the stands drawer you will find an envelope with all the necessary material for a correct assembly. Have ready a Phillips screwdriver to fit rear brackets to the stand and an Torx screwdriver to fit rear brackets to the machines back.

The pack includes:

- 2 grey short rubber feet to be used for the following tumble dryer models:

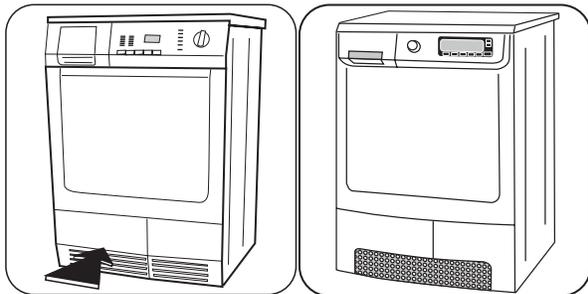

- 2 white long rubber feet to be used for the following tumble dryer models:

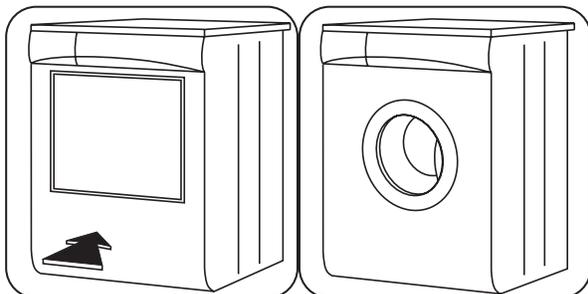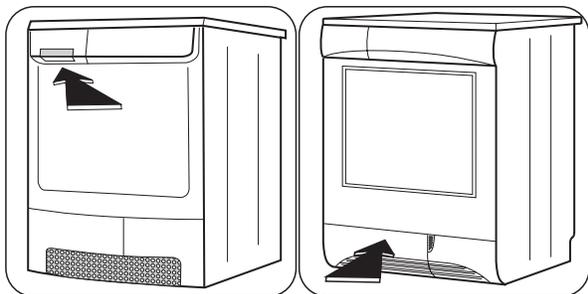

- 6 rear metal brackets (4 for washing machine and 2 for tumble dryer) ;
- 6 self-tapping screws (4.2 x 13 mm);
- 1 key to adjust the stands feet.

Important! Before starting the installation, adjust the stand's feet in order to achieve a perfectly stable horizontal position.

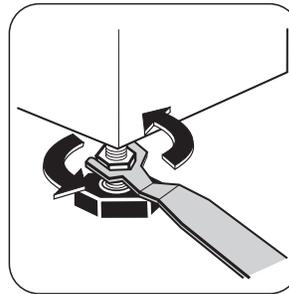


fig. 2

Proceed as follows (fig. 2):

- loosen the nuts using the key supplied with the stand;
- adjust the feet to allow for an uneven floor;
- tighten up all check nuts.

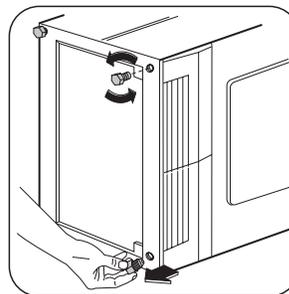


fig. 3

Lay the machine on its left side, making sure you do not damage it. Remove the front feet (fig. 3) and replace them with the rubber ones.

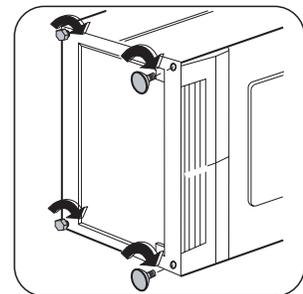


fig. 4

Tighten the back feet (fig. 4).

Warning! If you install the stand under an energy saver model Class A, you must not use the tumble dryer immediately. Please wait 8 hours at least. For more detailed information, read the appliance user manual carefully.

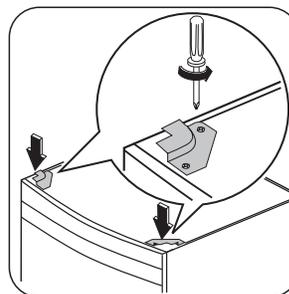


fig. 5

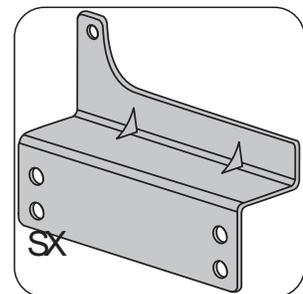


fig. 6

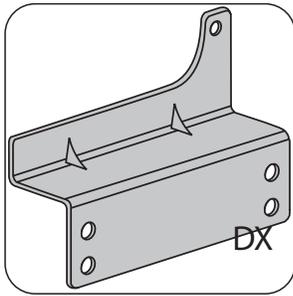


fig. 7

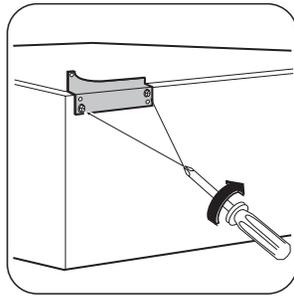


fig. 8

After having removed the front brackets from the stand (fig. 5), fit the rear brackets (fig. 6 and 7) to the stands back, using the screws supplied (fig. 8).

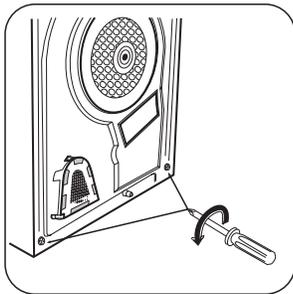


fig. 9

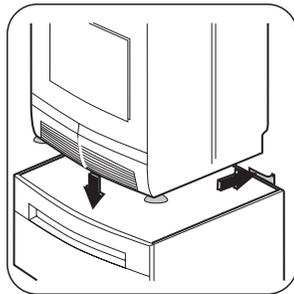


fig. 10

Undo the two screws found left and right on the lower part of the tumble dryer back (fig. 9). Lift the machine and correctly place it over the stand, trying to position first the stand against the rear brackets and then the suction caps over the stand surface (fig. 10).

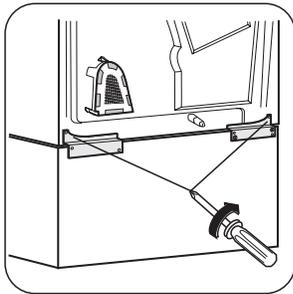


fig. 11

Fit the rear brackets to the machines back using the previously removed screws (fig. 11).

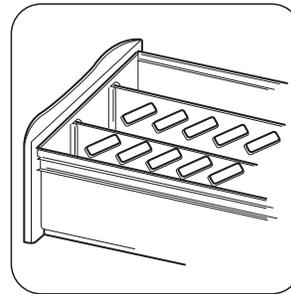


fig. 12

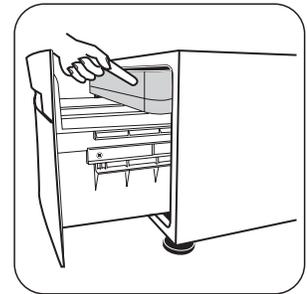


fig. 13

The stands drawer, with a capacity of up to 20 kg, contains two dividers; they may be taken out if you wish (fig. 12). The drawer was designed with a special compartment inside where you can place a folding plastic box, supplied, quite useful to store your washing laundry (fig. 13).

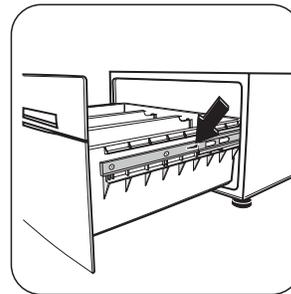


fig. 14

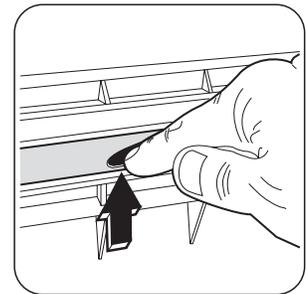


fig. 15

The drawer slides on two metal runners and can easily be pulled out to the full. Should you wish to remove the drawer, you must pull it out completely (fig. 14) and act on the two black plastic levers halfway through the metal runners. Pull the right lever down and the left lever up: the drawer will be uncoupled from the runners and easily removed (fig. 15).

Warning! Do not place any solvent or flammable substance into the drawer, as the fumes could be a possible cause of fire.

