





Quick-reference instructions


Please read and observe these operating and installation instructions carefully before using the washing machine for the first time.

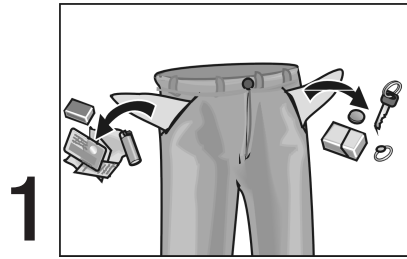


1

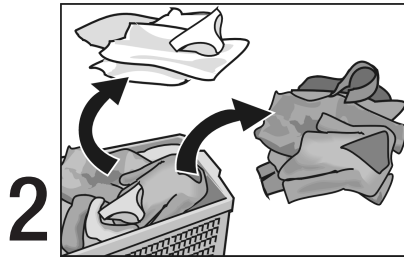

2

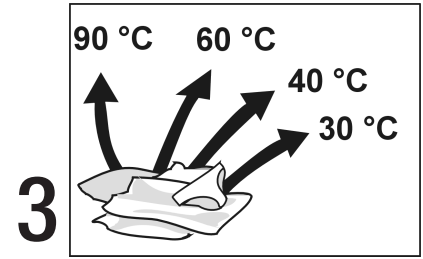


3

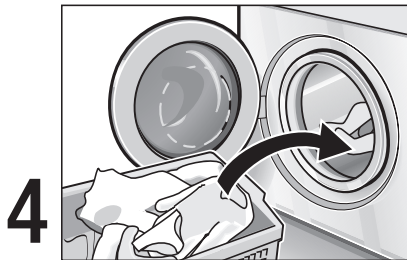

4




5

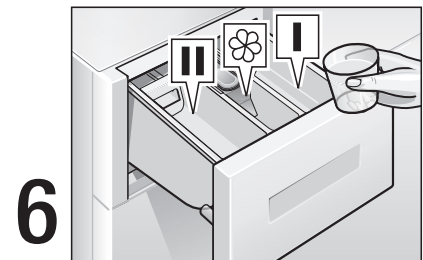


6

If required:


If required:

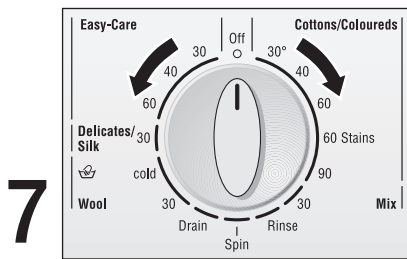

7

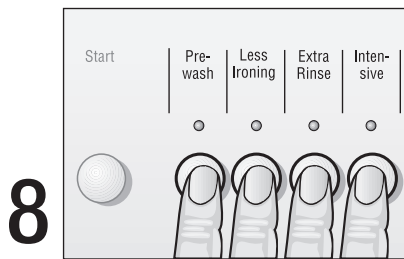


8

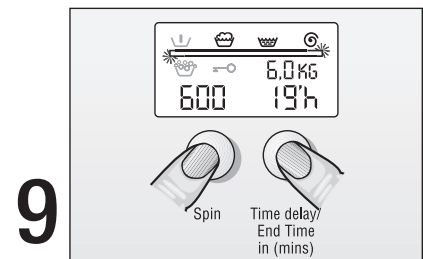

9

Symbols on the display panel:

- Prewash
- Washing
- Rinse
- Final spin/Drain
- Overdosage
- Childproof lock
- kg Recommended load

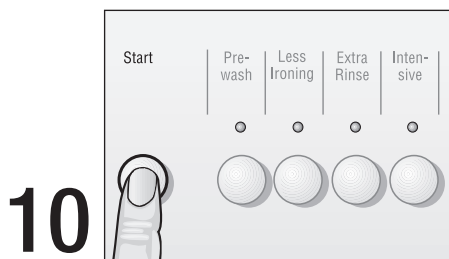


10

At the end of the programme:



1

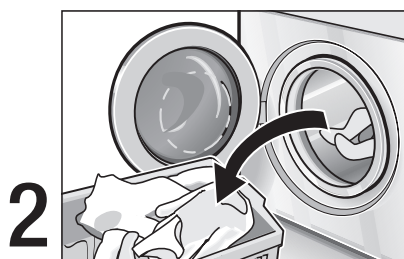

2

W5340X0GB
0204 en
9000 004 039

Overview of programmes

You can change the programme with the following **settings in the display field and/or additional functions**:

– Can be set in the display panel: **Spin speeds or “---”** (No final spin, the washing remains in the final rinsing water).
Select start time,

– Additional function/buttons: **Prewash:** Switch on prewash,
Extra Rinse: Additional rinse cycle, **Less Ironing:** Gentle spin,
Intensive: Intensive wash.

Type of laundry Comply with care labels!	Amount of laundry	Programme*	Degree of soiling	Required additional option button
Hard-wearing textiles, heat-resistant textiles e.g. made from cotton or linen 	6 kg	Cottons/Coloureds 30, 40**, 60 °C	lightly to normally soiled	Intensive
		Cottons/Coloureds 60 °C Stains**	normally soiled with stains	Intensive
		Cottons 90 °C	normally soiled	Intensive
	up to 5 kg	Cottons/Coloureds 30, 40, 60 °C	lightly soiled	–
		Cottons/Coloureds 30, 40, 60 °C	normally to heavily soiled	Intensive
		Cottons/Coloureds 60 °C Stains	normally to heavily soiled with stains	Intensive
For easy-care textiles, e.g. cotton, linen, synthetic materials or blended fabrics (Also suitable as a short programme) 	up to 3 kg (or 8 shirts)	Easy-Care 30, 40, 60 °C	lightly soiled	–
		Easy-Care 30, 40**, 60 °C	normally to heavily soiled	Intensive
For cotton washing and easy-care textiles – different types of washing can be washed together 	up to 3 kg	Mix 30 °C	lightly soiled	–
		Mix 30 °C	normally to heavily soiled	Intensive
For easy-care, washable textiles, e.g. silk, satin, synthetic materials or blended fabrics without wool (e.g. curtains) 	up to 2 kg	Delicates/Silk 30 °C	lightly soiled	–
		Delicates/Silk 30 °C	normally to heavily soiled	Intensive
For hand and machine washable wool or wool-rich textiles, e.g. cashmere, mohair or angora, also suited for hand washable silk 	up to 2 kg	Wool cold, 30 °C	lightly soiled	–
		Wool cold, 30 °C**	normally to heavily soiled	Intensive

Programme options

Programme selector	Notes/Application
Rinse	Rinse cycle with subsequent spin cycle for rinsing hand-washed laundry or for starching. Please comply with the spin speeds as specified in the operating and installation manuals.
Spin	Spin cycle after a programme with setting “---” (without final spin) or for spinning hand-washed washing. Washing water or rinsing water is drained before the spin cycle. Please comply with the spin speeds as specified in the operating and installation manuals.
Drain	Water is drained after a washing programme with the “---” (Without final spin) setting. For gentle treatment of delicate laundry.

* Pour detergent into dispenser **II** (on left) for programmes without prewash; distribute detergent between dispensers I and II for programmes with prewash.

** Programme setting for test in accordance or in conformity with EN 60 456 and IEC 60 456

Further information can be found in the operating and installation instructions.
Please read the manual carefully and comply with the safety instructions.

W5340X0GB
0204 en
9000 004 039