

Amana washing Machine error codes

Amana error codes

LED DISPLAY DESCRIPTION DIAGNOSTIC CODE

Nd The water level does not drop below the level of low water level 15 minutes before the start of rotation. 1

LO Door failed to unlock after 3 attempts. 2

NF Continuous filling 12 minutes. The general filling is 14 minutes. 3

FL could not be blocked after three attempts. 4

LE Water level sensor fault. 8

OE A fault has been detected in the water level sensor. The data (frequency) indicates that the water level is above or above the overflow level. E

E2 The key is depressed for more than 30 seconds, it is assumed that the key is stuck. 15

Dc Never exceeded 400 rpm due to an unbalanced load. 10

Od The door did not open after two complete washing cycles. The door switch has not been opened since the last two revolutions. 17th

DL Door lock switch with engine running. 18

DS The door switch is read as open, and the door lock switch is read as locked. 22

BE The engine tachometer signal does not work. 25

TE An abnormal high / low tempo is observed. Or resistance Ohm. 29