

Candy Error Codes

CANDY

E01 - problems in the operation of the door lock.

E02 - a signal about water supply problems: its level does not reach or exceeds the norm.

E03 - there are problems in the water drain system.

E04 - the machine signals a malfunction of the water filling system: its level exceeds the norm.

E05 - problems with the temperature sensor, there is no water heating.

E07 - signal about a problem with the drive motor (technogenerator is faulty).

E09 - malfunction of the drive motor (the shaft does not rotate).