

Candy Dishwasher Error Codes

Error code Error code interpretation Probable dishwasher malfunction

E1 Failure of water filling, signal "full tank" is not reached for 4.30 minutes after the start of the bay.

Chains of the device.

Channels of flooding / draining of water.

"AQUASTOP".

E2 Drain error, the "empty tank" signal is not reached within 4 minutes after the start of the drain.

Chains of the device.

Channels of flooding / draining of water.

"AQUASTOP".

E3 Error reaching the set value for the water temperature for the wash cycle.

A heating element.

Heating control circuits of the device responsible for heating.

E4 The anti-leakage system has been activated. Water in the pan.

Chains of the device.

Channels of flooding / draining of water.

"AQUASTOP".

E5 The NTC temperature sensor is broken or short-circuited.

Sensor defective / open.

Breakage in the connectors / wires.

Temperature (<-5 ° C)