

SAMSUNG Dishwasher Error Codes

E1 - The time of water supply or its limitation has been exceeded, or a weak pressure.

It is necessary to check the presence of cold water and pressure in the water supply.

E2 - Fault condition. The water does not drain to the end, or an error has occurred in the operation of the water level sensor. Check that the drain is not blocked with food residues, clean it if necessary.

E3 - Increasing the operating time of the heating elements, obtaining the optimum water temperature does not occur.

E4 - Water leakage or overflow. Leaking water, or excessive water supply. The probable cause is a fault in the bay valve or in the water level sensor.

E5 - Weak water pressure. Insufficient water in the dishwasher or malfunction of the delivery level sensor.

E6 - Temperature sensor malfunction. Breakage or short circuit.

E7 - Temperature sensor malfunction. Malfunction of the sensor or its opening.

E8 - Alternative valve operation error. It is not possible to set the "FLEX" valve to the desired position.

E9 - Button operation fault. If the button is held for more than 30 seconds. The possible cause of the problem is a short circuit or a button fall.

EA - Water level sensor malfunction. Over-water in the dishwasher or malfunction with water pressure switching. Check the position of the drain hose, at the end of the washing cycle, clean the drain from food debris.

UC - Problems with voltage. Power is supplied in the range of less than 180 V or more than 270 V. To avoid a short circuit or breakdown of the machine, it is recommended to reset the washing program and wait for a stable voltage in the mains.