

Error

Indus RANNING

Indus SLEEPING

Indus TIMER

There are problems with the internal solenoid type temperature sensor

starts blinking

starts blinking

starts blinking

Diagnose a room temperature sensor defect

starts blinking

starts blinking

shines

There are problems with an external solenoid type temperature sensor

starts blinking

starts blinking

does not shine or blink

The fan motor in the indoor unit fails

starts blinking

shines

starts blinking