

Error codes for BEKO air conditioners BKC INV, BKL INV series

E1 - error of the internal temperature sensor

E2 - Evaporator Sensor Error

E3 - error in engine operation

E5 - switching error between indoor and outdoor unit

1E - error of the external temperature sensor

2E - capacitor sensor error