



ARDO


Made up of **Perfection**

Reference programmes

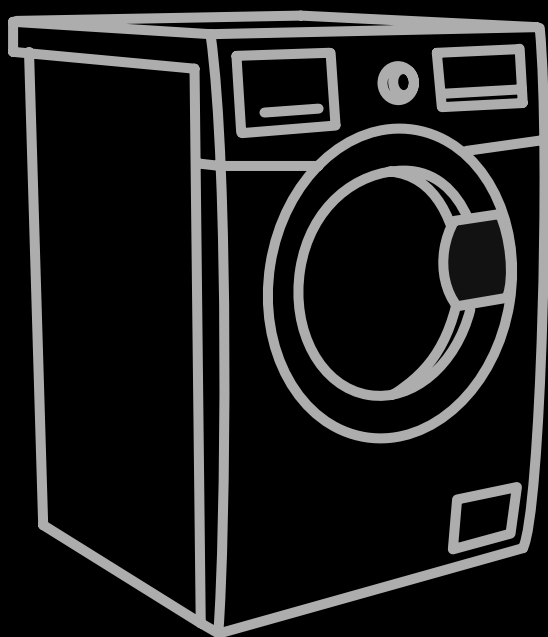

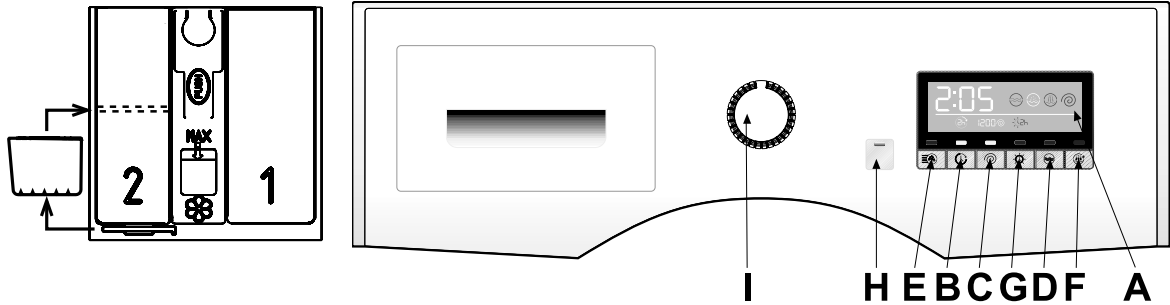

Detergent dispenser:

- 1 Prewash
-  Softener
- 2 Wash

Control panel:

- A LCD display
- B Delayed Start Button / Controls lock
- C Spin button
- D Prewash/Autoclean button

- E Turbo/lock control button
- F Extra Rinse Button
- G Dry Button
- H Start/Pause button
- I Programme selector knob

CORRECT WASHING PROCEDURE





Before using the washing machine, make sure that it has been installed correctly as reported in the instruction book.


Daily use

1. Before placing the washing in the washing machine, make sure that there are no hard pointed objects in the pockets (nails, screws, coins, pins, stones, etc.) as these can damage both the clothing and the appliance.
2. To improve the performance of the wash, place the washing loosely in the drum without compressing it. Do not overload the machine. A full load of particularly absorbent material such as bathrobes and towelling can unbalance the washing machine during the spin phase.


The automatic load-balancing system distributes the washing as evenly as possible and automatically sets the best spin speed to reduce vibrations to a minimum.

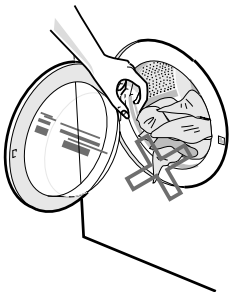

3. Close the door, making sure that no washing has become trapped between the door and the gasket.
4. Place the correct amount of detergent in the appropriate dispenser 2. When using a liquid detergent, insert the partition supplied. If the Prewash function is required, add detergent to compartment 1. Add softener to the compartment marked with the symbol . After adding the detergent, gently close the detergent drawer.

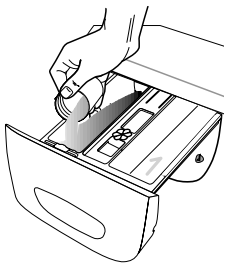


5. Use knob I to select a wash programme suitable for the type of fabric, following the instructions reported in the Programme Table. The LCD will display the duration of the selected programme and the maximum load. The remaining time may vary during the course of the wash programme in accordance with the load in the drum. At the end of the cycle, the word End will appear on the display.

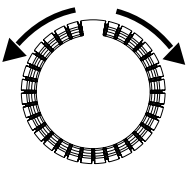

6. The spin speed automatically selected by the programme can be changed by touching button C. Button B is used to delay the start of the wash cycle by up to 19 hours. Both values appear on the LCD display.

7. Buttons D, E, F and G are used to select the extra functions. The options selected appear on the LCD display. The duration of the wash cycle varies according to which options have been selected.

8. To start the wash cycle, touch the Start button H. The LCD will display the duration of the cycle and the maximum load. The Easy Logic system updates the remaining cycle time in accordance with the actual load in the drum.

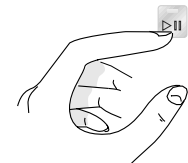

9. At the end of the wash cycle, the word End will appear on the display. Place knob I in the Stop position and open the door to remove the washing.


10. The washing machine can be reset at any time by placing knob I in the Stop position.



LCD DISPLAY: The large LCD display ensures quick and intuitive use of the washing machine. The display shows the wash options enabled, any delayed start, spin speed selected and the time remaining until the end of the cycle. The word End means that the door has been released.

After a few seconds, from the end of the wash cycle, the display switches off with the word End. To reactivate the display, press any button on the display.



DELAYED START: This feature allows you to delay the start of the wash cycle up to a maximum of 19 hours. Press the **B** button repeatedly until the display shows the desired start delay. The icon  flashes on the display until the start of the wash cycle. When the function is activated, the display will turn off the backlight after a few seconds to save energy. To reactivate, press any button on the display.






RINSE: Press the **F** button to activate the extra rinse function. This option is recommended if your skin is particularly sensitive to enzymes in detergents.

PREWASH: To perform a prewash, press the **D** button and put the detergent in the drawer **1**. The washing machine performs a prewash cycle at 40°C, max. Prewash is recommended for garments soiled with dust, dirt and sand or with particularly stubborn stains. See the program table for further information.

TURBO: Press the **E** turbo button to reduce the wash time. The operating parameters are automatically adjusted to ensure washing effectiveness and to allow time to be saved. See the program table for further information.

ADJUSTABLE SPIN Pressing the **C** button, the spin speed can be adjusted depending on the wash program selected and the type of fabric. The LCD display will show the speed selected. The “00” value will exclude the spin cycle at the end of the cycle.

N.B.: The maximum spin speed varies depending on the model. The speed matched to each program is the one recommended.

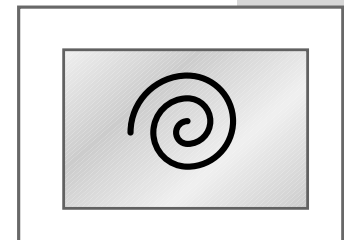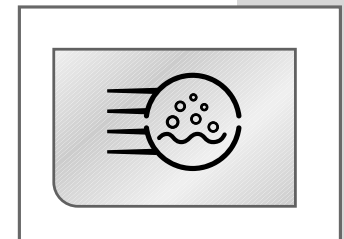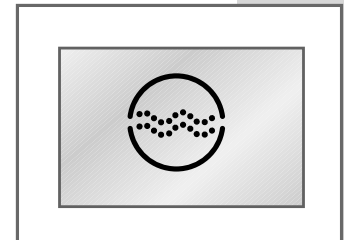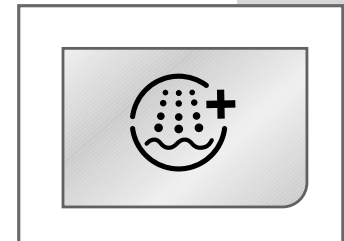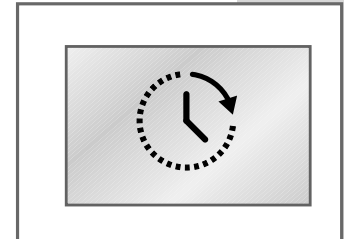


Unbalanced load control during spin cycle:

This washing machine is equipped with a special electronic control system for proper load balancing. Prior to every spin, the system makes sure that the cloths are spread as evenly as possible in the drum. In the case of uneven laundry distribution, for safety reasons, the final spin speed will be reduced and in cases of high load imbalance, will not be performed.



DRYING: Drying activate the option, the display will show the symbol indicating the level of drying and duration (h:min). In the case in which has been selected at the beginning of the drying cycle the washing program, this will start automatically and the total time on the display means of washing + drying. Until we will begin the process of drying, you can change the time by touching the button on the display, putting the machine to pause (see Start/Pause). With this option enabled no you can exclude the spin cycle and put in the basket dispenser detergents, during drying, can melt and damage linen and washing machine.


To achieve the best drying performance of clothes washed, the maximum load of washing declared (see program table), you should run this cycle in two phases with a maximum load does not exceed the value stated on the rating plate.

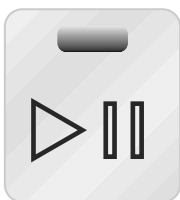

START/PAUSE: When programs and wash options are being selected, the start **LED** remains off. To confirm your selection and start the wash cycle, press the **H** button. The **LED** turns on. During the wash program in progress, the cycle can be stopped by pressing the **START/PAUSE** button for a couple of seconds. At this point, the wash program stops and you can make changes to the wash options (enabled depending on which stage of the wash cycle you are in). If the water temperature is below 50°C, the door can be opened (about 2 minutes after enabling the pause function) to load/empty any laundry. To re-enable the wash phase press the **START /PAUSE** button again.

N.B. if, during a pause, no operation is carried out, the wash phase will restart automatically after 5 minutes.


CONTROL LOCK (child safety lock): to activate the control panel lock, simultaneously press the **B-E** (**lock symbol**) buttons; three horizontal lines will appear on the display. If, during the wash cycle or at the end of the cycle, you wish to reactivate the controls, press buttons **B-E** simultaneously, until the three horizontal lines disappear.

AUTOCLEAN: Frequent washes at low temperatures can lead to the formation of mould and create bad smells inside the washing machine. The AUTOCLEAN function thoroughly cleans the washing machine by means of a special 90°C cycle. AUTOCLEAN will automatically suggest starting the cleaning programme after a certain number of washes, if no hot washes have been carried out during this time. This it does by means of a flashing **LLn** on the display. Remove all the washing from the drum, place knob **I** in position **Autoclean**, and press Start button **H** to start the cycle. The AUTOCLEAN programme can be effected at any time or when circumstances require it. Remove the washing in the drum and close the door. Place knob **I** in position **Autoclean**, keeping button  pressed until **LLn** appears on the display. To start the AUTOCLEAN cycle, press the Start button **H**

EASY LOGIC: The EASY LOGIC system automatically regulates the wash time and water and power consumption according to the actual amount of washing placed in the drum. The ½ load function is therefore redundant in that the EASY LOGIC system automatically sets the wash parameters.

TECHNICAL CHARACTERISTICS



MODEL: 	60WD14106LW/A/B/X
Width (cm)	59.5
Dimensions Height (cm)	85.0
Depth (cm)	60.0
Max. spin speed (rpm)	1400
Max Load Wash (kg)	10.0
Max Load Dry (kg)	6.0 / 4.0
Recommended Times Dry (min.)	250' / 170'
Water pressure	0.05 MPa - 1.00 MPa
Electrical connection	see rating plate



Programs		Type of laundry	Maximum spin speed (rpm)	Maximum load (kg)	Options
Symbols	Temperature (°C)				
	90°C	Extra dirty white cotton and linen fabrics even with stains of an organic nature.	Max	10.0	
	60°C	White and colour resistant cotton and linen fabrics. Reference program in compliance with Standard EN 50229.	Max	10.0	
	40°C	The program ensures the best cleaning performance at just 40°C with the maximum energy saving.	Max	10.0	
	20°C	The special mix program allows to wash different types of synthetic fabrics all together (cotton, synthetics, mixed) with a perfect result.	800	4.5	
	40°C	The wool program is ideal to wash delicate items labelled "machine washable". Assures to take care of colours and the original consistency of clothing for a long time.	800	2.5	
	35°C	The wash cycle Express 20' is suitable to refresh, in just 20 minutes, slightly dirty linen. Express 20' allows you to save valuable time by performing a wash cycle at 35°C.	800	4.5	
	30°C	Delicate fabrics require special care and are usually washed by hand. The specific hand wash assures you the maximum gentleness in treating clothing.	500	2.5	
Hygienic	40°C	The hygienic program ensures the removal of germs and bacteria from the laundry.	Max	10.0	
	30°C	The coloured program allows you to wash clothing of different colours all together; you can safely wash light and dark linen without any risk of discoloration.	Max	10.0	
	40°C	The special jeans program, carries out a gentle wash at 40°C, which takes care of all denim fibres and at the same time prevents colours fading. Delavé denim clothes will always remain as new.	800	4.5	
	40°C	The shirts program reduces the time spent on ironing operations. Temperature, water level, intensity of washing and spin speed are electronically controlled to decrease the formation of wrinkles and ease the ironing of blouses and shirts.	500	2.5	
Sport	40°C	The sport program is designed for sportswear and casual wear. The wash cycle at 40°C keeps intact the fabric's shape and the elasticity of modern synthetic fibres.	800	4.5	
	—	The Dry program allows you to dry those clothes already washed that only require drying; also useful to remove moisture from clothing that has to be stored for a long time. If the laundry is a lot wet, to save time and energy, do a spin cycle before drying.	—	6.0 4.0	
	—	The Rinsing program is useful to rinse out hand-washed laundry or to refresh clothing that was stored for a long time.	Max	10.0	
	—	The spin speed is adjustable to suit all types of fabrics.	Max	10.0	

(*) The actual water temperature could differ from the one indicated in the program.


اختيارات	أقصى حمولة (كجم)	أقصى سرعة للتردد المركزي (لقة/د)	نوع الغسيل	البرامج درجة الحرارة (*)	الرمز
   	10.0	Max	أقمشة بيضاء من الكتان والقطن وشديدة الاتساخ وبها بقع بما في ذلك البقع العضوية.	90°C	
   	10.0	Max	الأبيض والملون من الكتان والقطن. البرنامج المرجعي وفقا EN 50229 .	60°C	
   	10.0	Max	يضمن البرنامج درجة فعالية فقط عند 40 مئوية مع الحد الأقصى	40°C	
   	4.5	800	البرنامج الخاص MIX يسمح لك أن تغسل أقمشة مختلفة (القطن والأقمشة الصناعية، والمختلطة) معا بنتيجة مثالية.	20°C	
	2.5	800	برنامج الصوف مثالي لغسيل أصناف الأقمشة الحساسة المكتوب عليها عبارة "قابل للغسيل في الغسالة". يضمن العناية بالألوان والتماسك الأصلي للملابس بعد مضي الزمن عليها.	40°C	
	4.5	800	دورة الغسيل express - 20 دقيقة مناسبة لإضفاء النظافة في خلال 20 دقيقة للغسيل قليل الاتساخ. اكسيريس 20 دقيقة يسمح لك بتوفير الوقت الثمين بتنفيذ دورة الغسيل عند 35 مئوية.	35°C	
	2.5	500	تتطلب أصناف الغسيل الحساسة عناية خاصة وبصفة عامة يتم غسلها يدويا. الغسيل المحدد غسلة يدويا يضمن لك الحرص الشديد على معالجة الملابس.	30°C	
  	10.0	Max	برنامج النظافة الصحية hygienic يضمن لك إزالة الجراثيم والبكتريا الموجودة في الأقمشة البيضاء. يضمن البرنامج النظافة الصحية القصوى للأنسجة الملونة، والبيضاء، والألياف الصناعية.	40°C	Hygienic
   	10.0	Max	يسمح برنامج الألوان بأن تغسل معا أصناف نسيج ذات ألوان مختلفة؛ يمكنك غسل الغسيل فاتح اللون والداكن بأمان دون المخاطرة بفقد أي لون.	30°C	
  	4.5	800	يقوم برنامج الجينز الخاص بعمل غسيل رقيق على درجة حرارة 40 مئوية ويحرص على جميع الألياف الدنيم وفي الوقت نفسه يحميها من فقد اللون ويحترم ألوانها. الملابس من نسيج الجينز المغسول ستظل دائما وكأنها جديدة.	40°C	
	2.5	500	يقلل برنامج القمصان الوقت المخصص لعمليات الكي. درجة الحرارة ومستوى الماء وكثافة الغسيل وسرعة التردد المركزي يتم ضبطها إلكترونيا للتقليل من تكوين الثنيات وتسهيل كي القمصان والبلايز.	40°C	
   	4.5	800	برنامج sport مصمم خصيصا للملابس الرياضية والكاجوال. وتحافظ دورة الغسيل عند 40 درجة مئوية على شكل الأنسجة سليمة وكذلك مرونة الألياف الصناعية الحديثة.	40°C	Sport
	6.0 4.0	-	يسمح برنامج الملابس الجافة لك بتجفيف الملابس التي سبق غسلها ولا تتطلب سوى التجفيف؛ وهو مفيد أيضا لإزالة الرطوبة من الملابس التي سوف يتم تخزينها لفترة طويلة. إذا كانت الملابس شديدة البلل، فلتوفير الطاقة قم بعمل دورة عصر قبل التجفيف.	-	
 	10.0	Max	برنامج إعادة الشطف مناسب لإعادة شطف الغسيل المغسول يدويا وإنعاش الملابس المخزنة لوقت طويل.	-	
	10.0	Max	يمكن ضبط سرعة التردد المركزي لكي تناسب جميع أنواع الأنسجة.	-	

(*) درجة الحرارة الواقعية للماء يمكن أن تختلف عن الدرجة المبينة في البرنامج.

التجفيف: عند اختيار هذه الوظيفة، فإن الغسيل سوف يتم جفيفه بواسطة تيار من الهواء الساخن في نهاية مرحلة الغسل. يتم اختيار مدة مرحلة التجفيف بالضغط المتكرر على الزر G. يعتمد الوقت على كمية الغسيل المحملة ونوع النسيج ودرجة الرطوبة المطلوب الحفاظ عليها. عندما يتم تمكين هذا الخيار، يتم تعطيل وظيفة عدم العصر. في الوقت نفسه، يجب عدم وضع موزع مواد التنظيف في الحوض. لأنه يمكن أن ينصهر خلال مرحلة التجفيف ويتلف الغسيل والغسالة. لتحقيق أفضل أداء تجفيف الملابس وغسلها، والحمولة القصوى من غسل أعلن (انظر الجدول البرنامج)، يجب تشغيل هذه الدورة على مرحلتين مع أقصى حمولة لا تتجاوز القيمة المعلنة على لوحة التصنيف.



إثناء اختيار برنامج الغسيل، تكون لمبة بدأ التشغيل منطفأة. لتأكيد اختيارك والبدء في برنامج الغسيل اضغط على الزر H. ستضاء لمبة بدأ التشغيل. إثناء عملية الغسيل يمكنك إيقاف دورة الغسيل بالضغط المستمر على Start/Pause لمدة 2 ثانية. إثناء ذلك يتوقف البرنامج ويمكنك تغيير خيار التوقف (يتوقف ذلك على المرحلة التي وصلت إليها دورة الغسل). إذا كانت درجة الحرارة أقل من 50 درجة مئوية يمكنك فتح الباب (بعد دقيقتين من إيقاف الوظائف) لتعبئة أو تفريغ الغسيل. لإعادة التشغيل اضغط على زر Start/Pause مرة أخرى

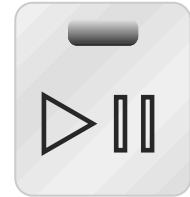

ملحوظة: إذا لم يتم تنفيذ أية عملية أثناء التوقف فإن مرحلة الغسل سوف تعود للعمل أوتوماتيكياً بعد 5 دقيقة. التحكم، الإقفال (قفل أمان للأطفال): لتنشيط قفل لوحة التحكم، اضغط في نفس الوقت أزرار B-E (رمز القفل)؛ سوف تظهر ثلاثة خطوط أفقية على الشاشة. إذا أردت أثناء دورة الغسيل أو عند نهاية الدورة، أن تعيد تنشيط أدوات التحكم، اضغط على الأزرار B-E في الوقت نفسه، حتى تختفي الخطوط الثلاثة الأفقية.

التنظيف الذاتي: إن تنفيذ غسيل على درجة حرارة منخفضة يشجع تكوين العفن والروائح الكريهة داخل الغسالة. تنظف وظيفة التنظيف الذاتي قاع الغسالة بواسطة دورة خاصة على درجة حرارة 90 مئوية.

تقترح وظيفة التنظيف الذاتي AUTOCLEAN من خلال وميض للاختصار الحرفي L على الشاشة، بدء تشغيل برنامج النظافة بعد عدد معين من مرات الغسيل، إذا لم تكن قد تمت في الفترة المعنية دورات غسيل على درجات حرارة عالية.

أخرج الغسيل كله من الحوض وضع مقبض الاختيار I على الرمز Autoclean ثم اضغط على زر بدء العمل H لكي تبدأ عمل الدورة. من الممكن تنفيذ برنامج AUTOCLEAN في كل مرة ترغب فيها ذلك أو عندما تتطلب ذلك الظروف. أفرغ الحوض من الغسيل وأغلق كوة الباب. ضع مقبض الاختيار I على رمز التنظيف الذاتي AUTOCLEAN ثم أضغط الزر النابض (يضيء) باستمرار حتى تختفي من الشاشة الحروف الدالة L على الشاشة. اضغط على زر بدء التشغيل H لبدء دورة الغسيل AUTOCLEAN.

EASY LOGIC: ينظم نظام Easy Logic أوتوماتيكياً زمن الغسيل واستهلاك الماء والطاقة حسب الكمية الحقيقية للغسيل الذي يتم تحميله في الغسالة. وظيفة 1/2 الحمولة ليست أساسية لأن نظام Easy Logic يفرض معايير الغسيل أوتوماتيكياً.

المواصفات الفنية


60WD14106LW/A/B/X		الموديل
59.5	طول (سم)	
85.0	ارتفاع (سم)	الأبعاد
60.0	عمق (سم)	
1400	أقصى طرد مركزي (لفة/د)	
10.0	الحمولة القصوى غسل (كغ)	
6.0 / 4.0	الحمولة القصوى الجافة (كجم)	
250' / 170'	تجفيف مرات موصى بها (دقيقة)	
0.05 MPa - 1.00 MPa	ضغط الماء	
أنظر لوحة المواصفات	التوصيلات الكهربائية	

لوحة أدوات التحكم:




شاشة LCD: شاشة العرض LCD الكبيرة تضمن لك الاستخدام السريع التلقائي للغسالة. تبين الشاشة خيارات الغسيل التي تم تمكينها، واري تأخير محتمل، وسرعة العصر المختارة، والوقت المتبقي حتى نهاية الدورة. تعني كلمة End أن الباب قد تم تحريره.

بعد ثوان قليلة، من نهاية دورة الغسيل، سوف تطفئ الشاشة مع كلمة End. لإعادة تنشيط الشاشة اضغط على أي زر على الشاشة.

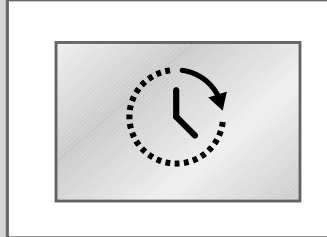


البداية المتأخرة: تسمح هذه السمة لك بتأخير بداية التشغيل لدورة الغسيل إلى حد أقصى قدره 19 ساعة. اضغط على الزر B عدة مرات حتى تعرض الشاشة التأخير المطلوب لبداية التشغيل. الأيقونة: تومض على الشاشة حتى بداية دورة الغسيل.


عند تنشيط الوظيفة سوف تطفئ الشاشة النور الخلفي لوضع ثوان لتوفير الطاقة. لإعادة التنشيط اضغط على أي زر على الشاشة.

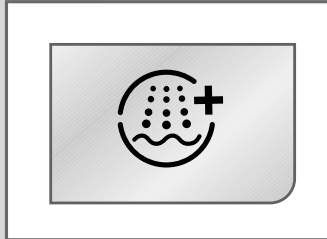


شطف: اضغط على الزر F لتنشيط وظيفة الشطف الإضافي. هذه الوظيفة يوصى بها إذا كانت بشرتك حساسة على نحو ملحوظ.

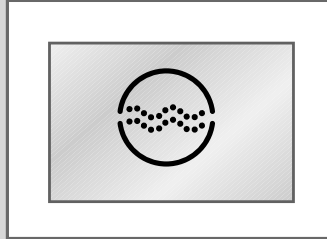

الغسل التمهيدي: للغسل التمهيدي اضغط الزر D وضع المنظف في الدرج 1. تؤدي الغسالة مرحلة غسل التمهيدي على درجة حرارة قدرها 40 درجة مئوية. الغسل التمهيدي يوصى به للثياب المتسخة بالغبار والأوساخ والطين أو البقع العنيدة. انظر جدول البرنامج لمزيد من المعلومات:

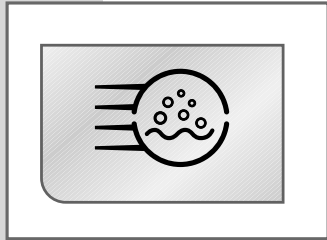

توربو: اضغط على زر التوربو E لتخفيض زمن الغسيل. معايير التشغيل يمكن ضبطها اوتوماتيكيا لضمان فعالية الغسيل والسماح بتوفير الوقت. انظر جدول البرنامج لمزيد من المعلومات:

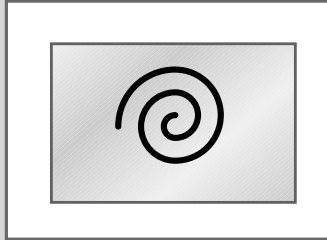


ضبط دورة العصر: بالضغط على الزر C، يمكنك تعديل سرعة دوران العصر وفقا للبرنامج المحدد للغسيل ونوع القماش. تعرض شاشة LCD السرعة المختارة. القيمة "00" تستبعد دورة العصر في نهاية الدورة.

ملحوظة: يختلف الحد الأقصى للسرعة العصر اعتمادا على الموديل. السرعة التي تتناسب مع كل برنامج هي تلك الموصى بها.

مراقبة الحمولة غير المتوازنة خلال دورة العصر:

تم تجهيز هذه الغسالة بنظام تحكم إلكتروني خاص من أجل التوازن السليم للحمولة. قبل بداية أي دورة عصر يتأكد النظام من أن الملابس موزعة بالتساوي قدر الإمكان في الأسطوانة. في حالة التوزيع غير المتساوي للغسيل، ولأسباب تتعلق بالسلامة، سيتم تخفيض سرعة الدوران النهائية، وفي حالات الخلل بالتحميل الزائد، فلن تتم الغسالة تنفيذ الدورة.

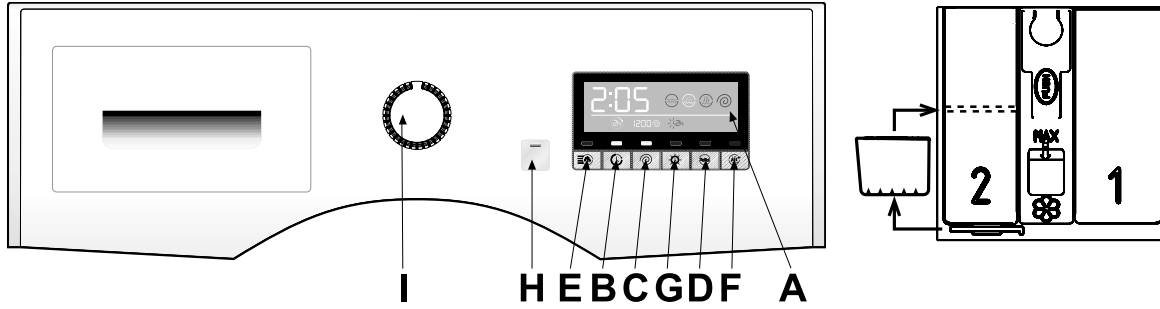






لوحة أدوات التحكم:		درج المنظفات
E	زر نابض توربو / إيقاف أدوات التحكم	1 الغسيل الأولي
F	زر نابض للشطف الإضافي	2 الغسيل
G	زر اختيار التجفيف	
H	زر نابض بداية التشغيل	
I	مقبض اختيار البرامج	
A	شاشة LCD	
B	زر نابض للبدء المتأخر / إيقاف أدوات التحكم	
C	زر نابض للطرد المركزي	
D	زر نابض للغسيل الأولي / التنظيف الذاتي	

الغسيل بطريقة صحيحة

قبل أن تبدأ وظيفة غسيل الملابس، تأكد من التركيب الصحيح كما هو مبين في كتيب التعليمات.

الاستخدام اليومي

1. قبل إدخال الأضناف في غسالة الملابس، أفرغ الجيوب من الأشياء الصلبة والحادة (مسامير، براغي، عملات معدنية، دبابيس، حصى) والتي يمكن أن تتلف الماكينة والملابس.
2. لتحسين أداء الغسيل، ضع الغسيل مفرودا دون كبسه ودون التحميل المفرط على الجهاز. حمولة كاملة من أقمشة ماصة جدا للماء مثل البشكير والمناشف والشراشف، يمكن أن تتسبب في عدم اتزان الجهاز خلال دورة الطرد المركزي للعصر. النظام الأوتوماتيكي لموازنة حمولة الغسيل يرتب الغسيل بطريقة أكثر تجانسا ويحدد سرعة الدوران الأمثل للتقليل إلى أدنى حد من أية اهتزازات.
3. اغلق الكوة (الباب الزجاجي) مع التأكد من عدم وجود ملابس محشورة بين الباب وحشوة العزل.
4. حدد الجرعة الصحيحة من المنظف في الدرج الخاص به **2**. أدخل الحاجز المتوفر مع الجهاز في حالة استخدام منظفات سائلة. إذا كنت تريد تنشيط خيار الغسيل الأولي أضف المنظف في الدرج **1**. لتلطيف وتليين المنسوجات استخدم الدرج الذي توجد عليه علامة الرمز المبين لهذا الخيار . بعد سكب المنظف أعد إغلاق الدرج بركة.
5. اختر برنامج الغسيل المناسب لنوع الأندسجة من خلال مقبض الاختيار **I** مع اتباع الإرشادات الواردة في جدول البرامج. سوف تعرض شاشة LCD مدة البرنامج المختار على أقصى حمولة. يمكن أن يتغير الزمن المتبقي خلال دورة الغسيل حسب الحمولة التي تم وضعها. تظهر كتابة كلمة **End** على الشاشة عند نهاية الدورة.
6. عن طريق الضغط على المفتاح **C** يمكنك ضبط سرعة طرد مركزي للعصر مختلفة عن التي اقترحها البرنامج المختار. يسمح الزر **B** بتأجيل بدء دورة الغسيل حتى 19 ساعة على الأكثر. يتم عرض كلا من القيمتين على شاشة LCD.
7. من خلال الأزرار **D, E, F, G**، يمكنك اختيار الوظائف الإضافية. الخيارات التي تم اختيارها يتم عرضها على الشاشة LCD. تختلف دورة الغسيل حسب وظيفة الخيارات التي تم تنشيطها.
8. اضغط على الزر **H** لبداية تشغيل دورة الغسيل. على الشاشة سوف يتم إظهار مدة الدورة مع الحمولة القصوى. نظام المنطق البسيط **Easy Logic** سوف يضيف الوقت المتبقي أثناء الدورة حسب الحمولة الحقيقية التي تم وضعها.
9. نهاية دورة الغسيل تتم الإشارة إليها على الشاشة بواسطة الكلمة **end**. أعد وضع مقبض الاختيار **I** على وضع **Stop** (إيقاف) لفتح الكوة وإخراج الغسيل.
10. في أي لحظة من الممكن إلغاء البرنامج بإعادة وضع مقبض الاختيار **I** على الوضع **stop**.

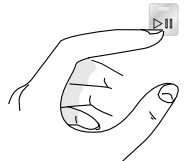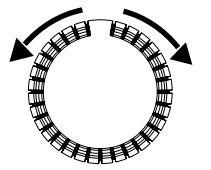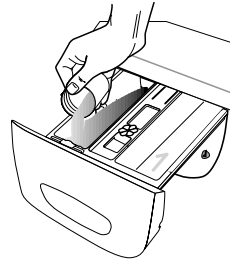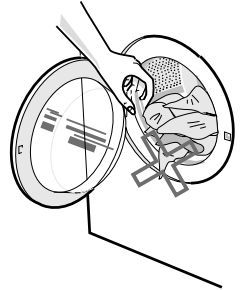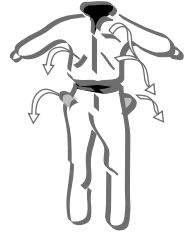


ARDO



Made up of Perfection

دليل البرامج

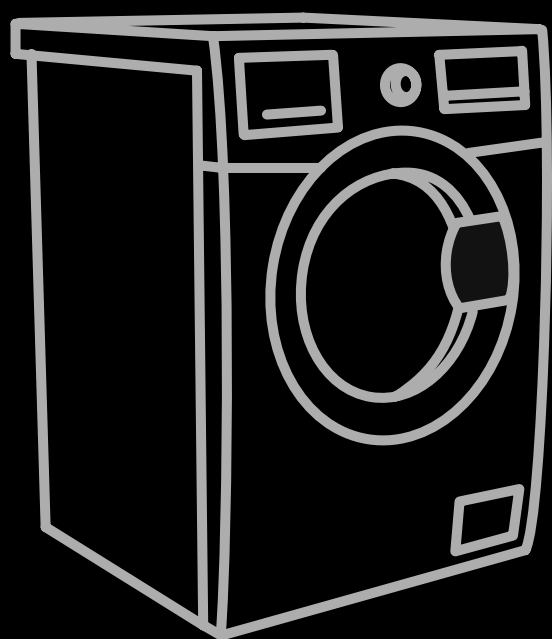

461308577 EN AR

SM3060 23/03/2016